



## The New RV Air Compressor from Bushranger 4x4 Gear.

### Features:

- Maximum Pressure: 60 psi
- Built-in Pressure Gauge
- Heavy Duty Copper Plated Tyre Chuck
- PTFE Teflon Piston Ring
- Oil-Less Design (Dry Sump)
- Aluminium Alloy Cylinder
- 5 Year Warranty
- Built-in LED Work Light
- 4.5m Power Cord with Battery Clamps and Inline Fuse
- Three piece Inflation Needle Kit
- Stainless Steel Valves
- Permanently Lubricated Bearings 'Lubed for Life'
- Gearless Direct Drive Motor

### Suggested Applications: (For tyres up to 31")

- 4WD Tyres
- SUV Tyres
- Touring Car Tyres
- Passenger Car Tyres
- Compact Car Tyres
- Motorcycle Tyres

### Specifications:

Part No:	55X32	Description:	RV Air Compressor
Voltage:	12 Volts	Max. Amp Draw:	14.5 Amps
Max. Working Pressure:	60 psi	Max Duty Cycle:	20 min. @ 30 psi @ 22°C

 **Kingsley Enterprises Pty Ltd**  
Ph: 1800 654 767 | Fax: 1800 655 196  
International: +61 2 8700 0400  
sales@kingsleyenterprises.com.au  
www.bushranger.com.au

### RV Air Compressor

Created: 13<sup>th</sup> May 2011  
Revised: 13<sup>th</sup> May 2011

**Performance Data:**

psi	0	10	20	30	40	50	60
CFM	1.83	1.55	1.34	1.20	1.09	0.99	0.88
Amps	9	10	12	13	14	14.5	14

BAR	0	1	2	3	4
LPM	52.0	40.0	33.0	29.5	28.5
Amps	9	11	13	14	14

**Typical Fill Rates**

<b>195/70R14</b> min:sec	
0 to 30 psi	2:00 (±10s)
15 to 30 psi	1:00 (±5s)

<b>225/60/R18</b> min:sec	
0 to 30 psi	2:50 (±10s)
15 to 30 psi	1:30 (±5s)

<b>30" x 10.5"</b> min:sec	
0 to 30 psi	4:30 (±15s)
15 to 30 psi	2:15 (±5s)

**Note:** Your engine must be running when using this compressor

**Warning:** Never run engine in enclosed area without proper ventilation.

**Safety:**

- This unit should only be used in dry environments.
- Protect the unit from moisture.
- Do not disassemble or attempt to repair or modify this unit.
- Never allow children to operate this compressor.
- Provide sufficient cooling time before storage.
- Never operate this compressor near fire or flammable liquids.
- There are no user-serviceable parts in this unit, no lubrication is required.
- Do not pump anything other than atmospheric air.
- Do not carry air compressor by its hose or power cord.
- Do not leave compressor running unattended.